


SPECIFICATIONS

- Equipped with high precision strain gauge sensor system
  - Capacity: 5kg/1g
  - Unit: g,oz,water-ml,milk-ml
- Battery-free technology
  - Kcal function
  - Tare function/Twist switch
  - Auto Off/Auto zero resetting

KEY FUNCTION

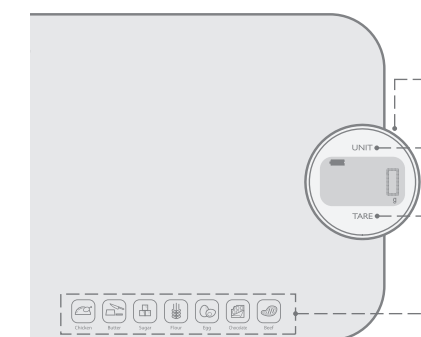


→ **Twist switch** Rotate the switch to create energy

→ **UNIT** Press to change the unit(g/oz/ml)  
Exit the KCAL mode to enter Weighing mode

→ **TARE** When weighing , short press this key to tare weight

→ **KCAL** Including 7 Food kcal value for choosing

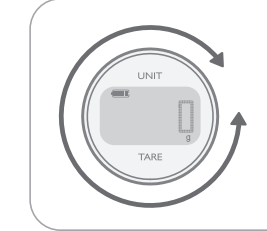

**POWER/** Battery free  
Use the advanced auto power generation control system ,  
a simple twist of the button can get full energy.


**Notice: Rotate the twist switch at least 120 degrees.**

1

OPERATION


**Weighing**

Step 1: Place the scale on a hard and flat surface  
Step 2: Rotating button not less than 120 degrees,and the LCD will show zero.  
Step 3: Put the food on the platform, the weight will be displayed.

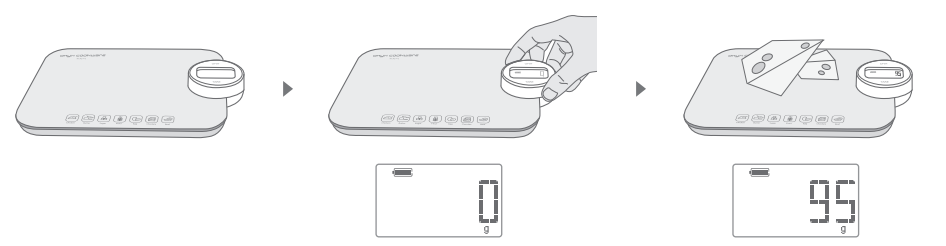

**Tare Function**

Step 1: Put the container on the platform, the LCD display will show the weight of the container.  
Step 2: Press "TARE" to clear the weight of the container (reset to zero). Then put the food into the container, the LCD display will show the weight of food only. Repeatedly press "TARE" to weight more different foods.  
Step 3: The LCD display will show the negative value of container if you remove the food and container from the platform together. Please press "TARE" again, the display will show zero in 2 seconds.

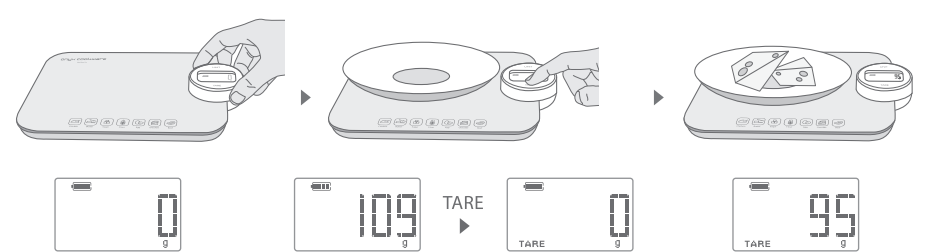


2

**Kcal function**

When weighing,put Sugar or Flour or Egg on the platform,press corresponding image key, then the LCD will show Kcal data accordingly.  
When showing the KCAL value,press unit key to exit this mode,change to weighing mode.

**Kcal for seven foods including chicken,butter,sugar,flour,egg,chocolate and beef.**

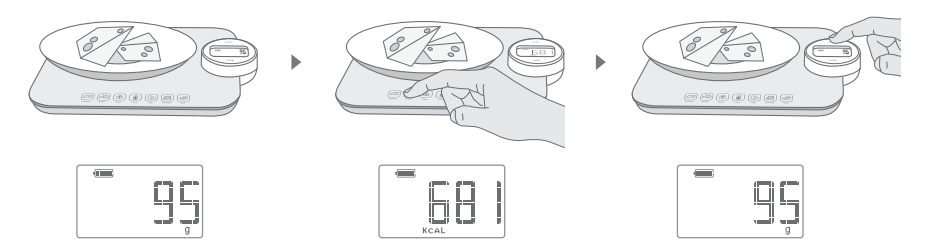

**ERROR INDICATION**



When the screen indicates " ", it will turn off automatically after few seconds.Please rotating button not less than 120 degrees again " ".



When the scale is over-loaded (more than 5kg), the screen will appear"EEEE".



When the scale is not stable before weighing,it will show.



When the kcal data out of range, it will show.

3



Kitchen Scale  
User manual



- ADVICE FOR USE AND CARE**
01. For accurate results, place scale on a flat surface.
  02. Static pressure is effective, do not drop it or strike the scale, otherwise the scale is easy to damage.
  03. Please use a damp cloth to clean the scale. Do not allow water to get inside scale.
  - 04.Do not use chemicals to clean the scale.
  - 05.To ensure the life of the scale, do not put the scale under wet & hot condition.
  06. Do not overload, otherwise the sensor will be damaged.
  07. Do not put heavy things on the scale when not use.
  08. Do not store the scale in an upright position.
  09. Due to the continuous improvements, this product is subject to change without notice.
  10. Please do not jump or stamp on the scale and avoid dropping it, as the scale is highly precise electronic instrument.

4

|                         |   |                                                           |
|-------------------------|---|-----------------------------------------------------------|
| 型 号 / model             | : | K1908说明书/ SCALE_DYNAMO IM                                 |
| 材 质 / material          | : | 120g 双铜纸/ 120g C2S paper                                  |
| 规 格 / specification     | : | 146 x 140mm (成品尺寸 / Folded)<br>146x 420mm (展开尺寸 / Unfold) |
| 工 艺 / Surface treatment | : | 单色双面印刷 / single color printing                            |
| 备 注 / Remark            | : | 包心折/ Envelope fold                                        |